


## Wireless Display Adapter Guide

For Support or Training please contact the Support Desk at [clermont.support@uc.edu](mailto:clermont.support@uc.edu) or 513-558-6949.

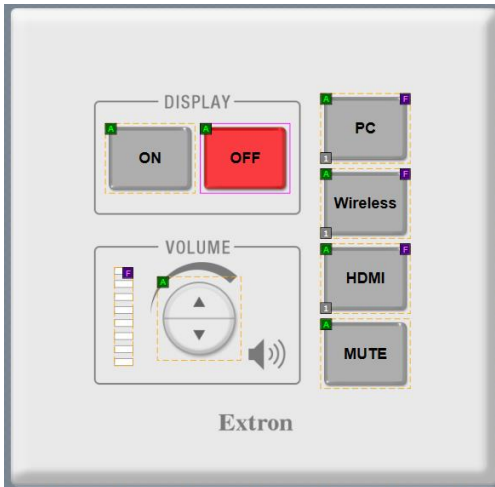

**Wireless Button Extron Control** - This button is labeled as Wireless on the Extron Controls. It is used for Laptop Connections in the following rooms: CCWWAC 159 and 163, CCMCD 145 and 150, and CCSTUDENT 200.

- When the wireless button is pressed you will see the image below on the screen. It will list the room number.
- On your laptop make sure you are connected to UC\_Secure.
- Press the Windows Key and the K Key at the same time on your laptop keyboard.
- Choose the room that you are in to project to the display.
- To disconnect press Windows Key and K Key at the same time and press disconnect.

